


# 24X17 WALL MOUNTED LURE & FLY DISPLAY INSTALLATION 2-11-23


[uniquefishingsupplies@gmail.com](mailto:uniquefishingsupplies@gmail.com)

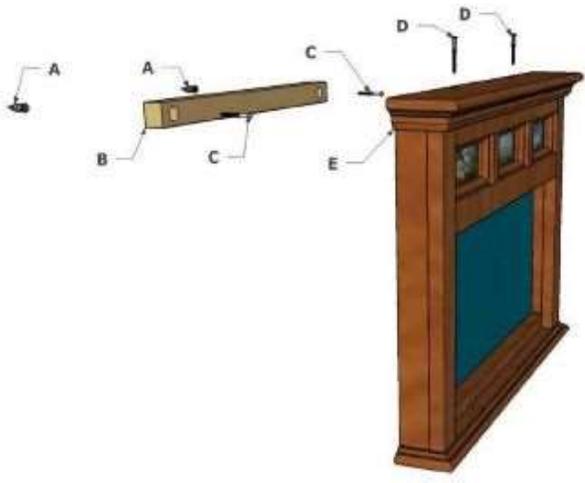

### INCLUDED PARTS:

- A = (3) Zinc drywall anchors
- B = (1) Wood hanging strip
- C = (3) #8 x 1 1/4" Philips head screws
- D = (2) Black Phillips head screws
- E = (1) Lure and fly wall mounted display

**WARNING:** Although ruggedly constructed these racks are made for displaying lures, flies and decorative items. Do not use display for personal support or heavy items. For interior use only.

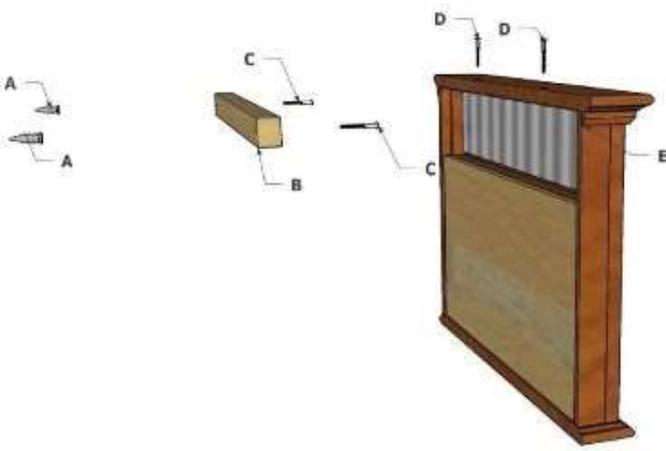


### TOOLS NEEDED:

- Phillips head screwdriver
- Tape measure
- Level
- Pencil
- 3-5 of your favorite swear words (optional)

**WARNING:** (inspect for wires or pipes before drilling into wall)


The "A" drywall anchor is designed for installation into drywall only. Masonry anchors are not included. The "C" screw (or drywall screws) can be used for installation into wood studs behind the drywall. Pre-drill the wood studs with a 1/8" drill before screwing the mounting collar into the wall.

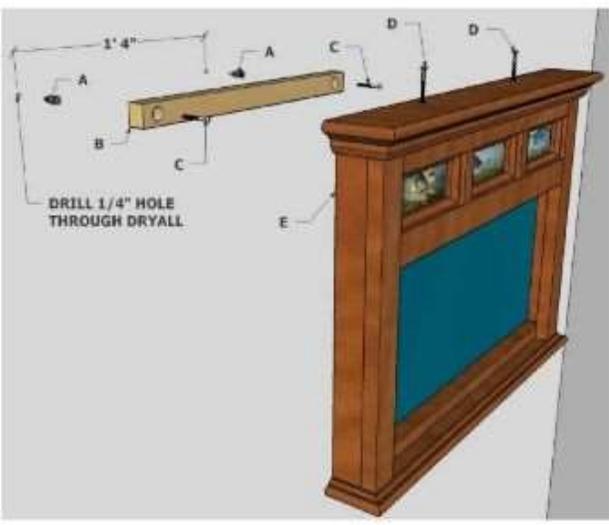

### Step #1


- Select the location you want to install your display on your drywall wall. Be sure the area behind the drywall anchors is clear of wires, plumbing, studs or other dangers.
- Use a level to provide you with a level line to measure the 2 hole locations as shown in the drawing to the left. Pre-drill (2) 1/4" holes through the drywall.

24X17 WALL MOUNTED LURE & FLY DISPLAY INSTALLATION 2-11-23  
[uniquefishingsupplies@gmail.com](mailto:uniquefishingsupplies@gmail.com)

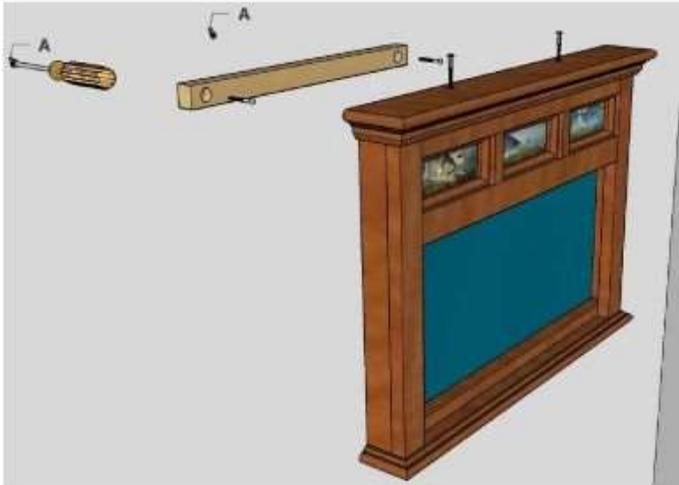


Step #2

- Use the Phillips head screwdriver to screw the two "A" drywall anchors into the three ¼" holes drilled in step #1.
- Be sure the "A" drywall anchors are flush to the drywall.
- Do not use a power drill to install these anchors as it might strip the dry wall and cause a weak installation mount.

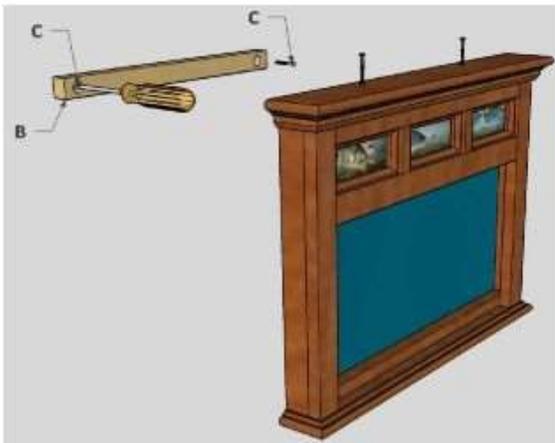

Step #3

- Use the Phillips head screwdriver to attach the "B" wood hanging strip and "C" screw into the "A" drywall anchor.
- Be sure the "B" wooden hanging strip is firmly mounted to the drywall surface.

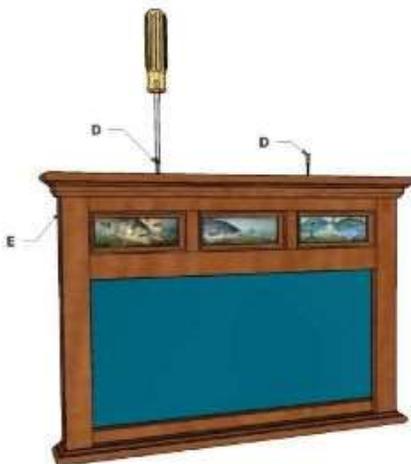

Step #4

- Place the display rack over the "B" wood hanging strip and use the Phillips head screwdriver to screw the two "D" drywall screws into the two top holes of the display rack.

Thank you for your order. I hope you enjoy your display rack for many years to come!